IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER

DANGER - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
5. **Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around appliance.**
6. Never use while sleeping.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
10. **Do not place the heated unit directly on any surface while it is hot or plugged in.**
11. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and other debris.
12. Do not use an extension cord with this appliance.
13. Do not touch hot surfaces of the appliance. Use handles or knobs.
14. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.
15. Do not use with a voltage converter.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This steam waver is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

When putting on the table, the unit should be in correct position. The two barrels should be facing upward.

WARNING: Never remove reservoir when hot. Allow to cool before filling. To fill: slide the water reservoir from unit. Open rubber reservoir cap and fill with distilled water. Replace rubber cap and slide back onto unit. **ONLY USE DISTILLED WATER.**

TO FILL WATER RESERVOIR

2-STAGE STYLING AND ADVANCED TECHNOLOGY

You'll love what our new high-tech 2-stage styling system can do for your hair. As tourmaline ceramic makes waver plates glide smoothly through hair, ionic steam mist smoothes the hair's cuticle layer to protect it from heat damage while adding shine and moisture to hair.

The 2-stage styling system first infuses hair with conditioning ionic steam, and then locks in all that healthy moisture with heated plates. The results are sensational: sexy, silky shiny waves that last! The advanced Tourmaline Ceramic™ technology and our 2-stage styling system let you achieve longer-lasting waves every time you style!

GETTING STARTED

Hair should be clean and completely dried before using the styler. Plug the iron into an electrical outlet. Turn on unit. Allow unit to heat up for 30 seconds.

WARNING: The styling iron's barrel will get very hot within a few seconds and should not come into contact with the skin after the styling iron has been turned on.

NOTE: the unit may produce a clicking sound at times, which is normal for a high output ion generator.

The styler's 3 unique ultra-high heat temperature settings and instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

Temperature Setting Guide

TEMP CONTROL	HAIR TYPE
Power/Low*	Delicate, thin, easy-to-style hair
Medium	Average-to-thick or treated hair
High/Max	Hard-to-style hair

*Leakage water may be found if it is set to low temperature setting.

IONIC BENEFITS

Ionic properties neutralize positive charges in the air, reducing the static electricity that dulls hair and causes flyaway frizzies. Hair instantly becomes more manageable and shiny.

TO CREATE SEXY WAVES

Separate your hair into three parts: upper, middle and lower segments. Clip the upper two segments of hair out of the way. Spray the bottom segment of hair with styling product if desired.

1. Begin with lowest segment of hair. Place sections of hair between the wave plates; press and hold for 5–10 seconds.
2. Repeat styling process moving down, so waves are continuous.
3. Release middle segment of hair and repeat.
4. Release upper segment of hair, starting two inches from roots and repeat.
5. Let hair cool and break up waves with your fingers to create a softer look.
6. Tease roots with a comb for added volume.

UNIFORM HEAT RECOVERY SYSTEM

Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

Never leave your styling iron on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.

USING INSTANT HEAT AND THE 3 ULTRA-HIGH HEAT TEMPERATURE SETTINGS

This Instant Heat styler has 3 ultra-high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant, and helps you create the look you want.

CÓMO CREAR ONDAS SEXY

Divida el cabello en tres secciones horizontales. Sujete las dos secciones de arriba encima de la cabeza. Aplique un spray de peinado sobre la sección de abajo si desea.

1. Empiece con la sección de abajo. Coloque una sección de cabello entre las placas y espere durante 5–10 segundos.
2. Baje la plancha y repita para crear ondas continuas.
3. Haga lo mismo con la sección del medio.
4. Afloje la sección de arriba y repita, empezando a dos pulgadas de la raíz.
5. Permita que el cabello enfríe y "rompa" las ondas con los dedos para suavizarlas.
6. Ahueque la raíz con un peine para dar más volumen.

CALENTAMIENTO INSTANTÁNEO & 3 OPCIONES DE TEMPERATURA

Este aparato cuenta con 3 opciones de temperatura para permitirle escoger la temperatura perfecta para su tipo de cabello, desde el más fino hasta el más grueso, para permitirle escoger la temperatura perfecta para su tipo de cabello, desde el más fino hasta el más grueso, y siempre obtener los resultados deseados, sin lastimar el cabello.

SISTEMA DE CONSERVACIÓN DEL CALOR

Su aparato también está dotado de un sistema de conservación del calor, igual que las herramientas profesionales creadas por los ingenieros de Conair. A diferencia de otras herramientas cuya temperatura baja durante el uso, este sistema mantiene la temperatura constante, sin pérdida de calor. Cada sección de cabello está peinada usando la misma temperatura, lo que permite obtener resultados uniformes y peinados perfectos.

Nunca deje el aparato desatendido después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

Guía de temperatura

AJUSTE DE TEMPERATURA	TIPO DE CABELLO
Encendido/Bajo*	Cabello delicado, fino o dócil
Medio	Cabello normal, espeso o tratado
Alto/Max	Cabello resistente

*Puede que se escape agua de las placas cuando se usa el ajuste de calor bajo.

VAPOR IÓNICO

Los iones negativos neutralizan la carga positiva presente en el aire para reducir la estática y el frizz. El cabello se vuelve instantáneamente más dócil y brillante.

SISTEMA DE PEINADO EN 2 PASOS Y TECNOLOGÍA AVANZADA

Le encantará lo que la nueva tecnología de peinado en dos pasos puede hacer para su cabello. El revestimiento de cerámica/turmalina hace que el cabello se deslice fácilmente contra la superficie, mientras el vapor iónico suaviza la cutícula, humecta el cabello, lo protege contra el calor y agrega brillo.

Nuestro nuevo sistema de peinado en dos pasos acondiciona el cabello con vapor iónico, luego lo sella con calor. ¡Los resultados son estupendos: ondas sexy, brillantes y sedosas, por más tiempo! Gracias a la avanzada tecnología Tourmaline Ceramic™ y al sistema de peinado en 2 pasos, siempre obtendrá resultados perfectos y duraderos.

FUNCIONAMIENTO BÁSICO

El cabello debe estar limpio y completamente seco. Enchufe el cable en una toma de corriente. Encienda el aparato. Permita que el aparato caliente durante 30 segundos.

ADVERTENCIA: El tubo se volverá extremadamente caliente en segundos. Evite todo contacto con la piel después de encender el aparato.

Puede que el aparato emita un chasquido de vez en cuando. Esto es normal y es debido a la alta cantidad de iones generados por el generador de iones.

Este aparato ofrece 3 opciones de temperatura, para todo tipo de cabello, y calienta muy rápidamente. Si su cabello es fino, le recomendamos que utilice un nivel de temperatura bajo. Si su cabello es espeso, grueso, ondulado o resistente, le recomendamos que utilice un nivel de temperatura alto. ¡Personalice la temperatura, según su tipo de cabello!

GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Utilícelo solamente con corriente alterna (60 Hz). Este aparato ha sido diseñado para funcionar con corriente de 120V CA

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

Si debe depositar el aparato, asegúrese de que esté en la posición debida. Los dos tubos deben apuntar hacia arriba.

LLENADO DEL DEPÓSITO DE AGUA

ADVERTENCIA: Nunca retire el depósito de agua aún caliente. Permita que enfríe antes de retirarlo. Para llenar el depósito: retírelo del aparato. Abra el tapón de caucho y llene el depósito con agua destilada. Cierre el tapón. **UTILICE AGUA DESTILADA SOLAMENTE.**

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO.

MANTÉNGALO ALEJADO DEL AGUA

ADVERTENCIA - Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

WARNING - Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca deje el aparato desatendido mientras esté conectado.**
2. Supervise el uso de este aparato cuidadosamente cuando esté usado por, sobre o cerca de niños o personas con alguna discapacidad.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
4. **No utilice este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión y reparación.**
5. **Mantenga el cable alejado de superficies calientes. No jale, retuerza ni enrolle el cable alrededor del aparato.**
6. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.
7. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.
8. No utilice el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
9. Este aparato se vuelve muy caliente. Mantenga los ojos y la piel alejados de las superficies calientes.
10. **No coloque el aparato sobre ninguna superficie mientras esté caliente o conectado.**
11. Nunca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
12. No utilice una extensión con este aparato.
13. No toque las partes calientes de este aparato. Utilice el mango y los botones o perillas.
14. El cuerpo del aparato cerca del tubo aire se vuelve muy caliente durante el uso. No lo toque.
15. No utilice este aparato con un convertidor de voltaje.

PLANCHA ONDULADORA *CON VAPOR*

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Instrucciones

infiniti*PRO* by CONAIR

Modelos S12/S12R

Para registrar su producto, visítenos en: www.conair.com/registration

CENTRO DE SERVICIO

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation

Para más información sobre los productos Conair o Infiniti by Conair™, llame al 1-800-3-CONAIR o visítenos en: www.conair.com/infiniti

12PA131284

IB-11379

GETTING TO KNOW YOUR STYLING IRON

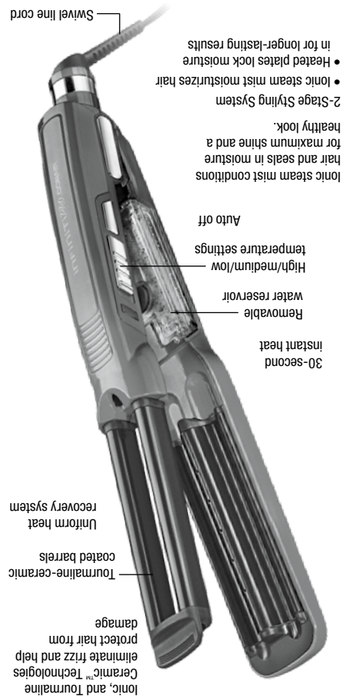
Swivel line cord
2-Stage Styling System
• Ionic steam mist moisturizes hair
• Heated plates lock moisture in for longer-lasting results
Ionic steam mist conditions hair and seals in moisture for maximum shine and a healthy look.
Auto off
High/medium/low temperature settings
Removable water reservoir
30-second instant heat
Ionic, and Tourmaline Ceramic™ Technologies eliminate frizz and help protect hair from damage
Tourmaline-ceramic coated barrels
Uniform heat recovery system

Your high-temperature steam waver is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

USER MAINTENANCE

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

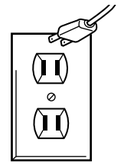

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and $7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation

For info on any Conair or Infiniti by Conair product, call: 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

12PA131284

IB-11379

infiniti*PRO* by CONAIR

Models S12/S12R

Instruction & Styling Guide

STEAM*WAVER*

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

FAMILIARÍCESE CON SU PLANCHA ONDULADORA

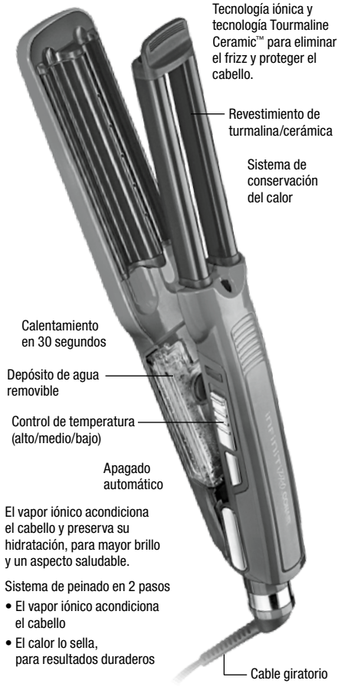
Tecnología iónica y tecnología Tourmaline Ceramic™ para eliminar el frizz y proteger el cabello.
Revestimiento de turmalina/cerámica
Sistema de conservación del calor
Calentamiento en 30 segundos
Depósito de agua removible
Control de temperatura (alto/medio/bajo)
Apagado automático
El vapor iónico acondiciona el cabello y preserva su hidratación, para mayor brillo y un aspecto saludable.
Sistema de peinado en 2 pasos
• El vapor iónico acondiciona el cabello
• El calor lo sella, para resultados duraderos
Cable giratorio

INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que enfríe y limpie la superficie exterior con un paño humedecido. En caso de mal funcionamiento, desconecte el aparato, permita que enfríe y regréselo a un centro de servicio autorizado. No trate de repararlo.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

ALMACENAJE

Cuando no lo utiliza, su aparato es fácil de almacenar. Permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tironee ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

ADVERTENCIA:
SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO

MANTÉNGALO ALEJADO DEL AGUA

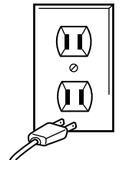

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

GARANTÍA LIMITADA DE CINCO AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 60 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US$7.50 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.